


# Air 1

Commander for wireless flash shooting  
Canon/ Nikon/ Sony

## INSTRUCTION MANUAL



## Names of the Components

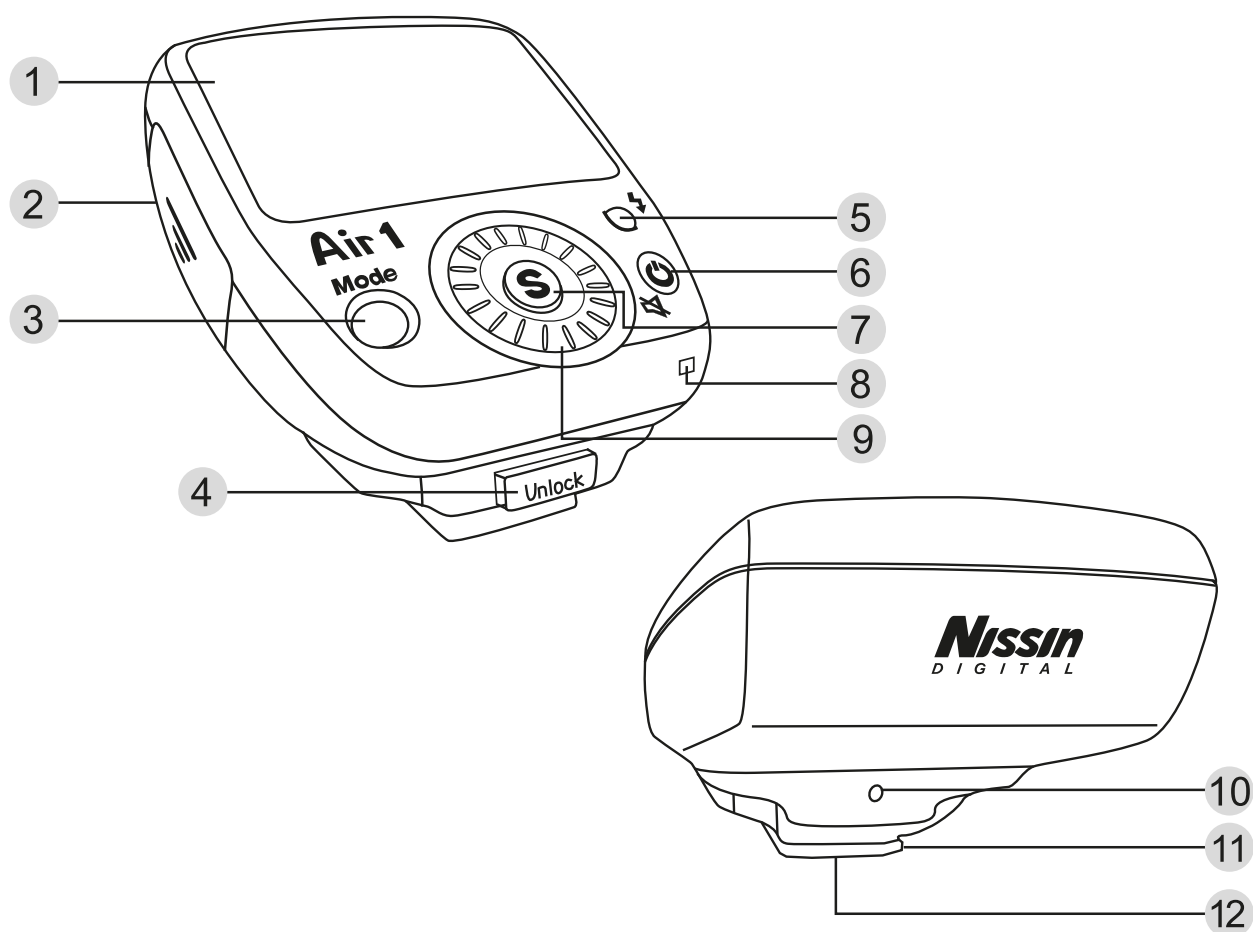

- 1 LED panel
- 2 Battery compartment door
- 3 Mode button
- 4 Unlock button
- 5 Pilot button (Test flash button)
- 6 On/ Off switch (Sound On/ Off button)
- 7 Select/ Set button
- 8 Strap hold
- 9 Select dial
- 10 AF-assis light
- 11 Mounting foot
- 12 Hotshoe contacts




## Basic Operation

### Before starting wireless flash shooting.

#### Inserting batteries

Usable batteries - Alkaline batteries, Lithium batteries or NiMH batteries.

1. Open the battery compartment door and insert 2 x size AAA batteries as shown by the picture.
2. Make sure the + and - battery contacts are correctly inserted at the battery compartment.
3. Close the battery compartment door and slide it back in place.

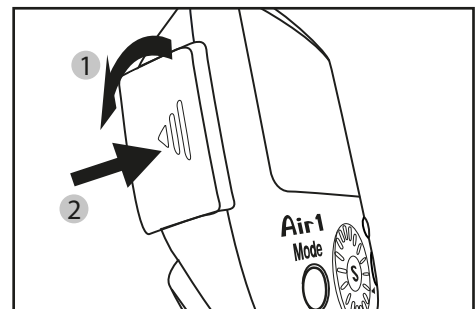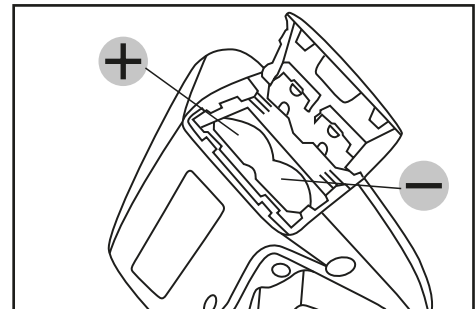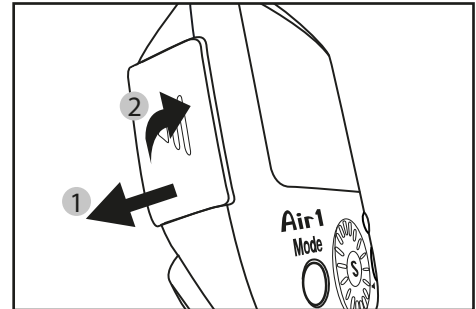

#### NOTE

It is recommended to use 2 batteries of the same brand and type, and replace them all at the same time.

Wrong insertion of each battery would not make electric contact.

## Basic Operation

### Air 1 has an energy saving power off function


To save battery energy, the Air 1 display screen dims in about 4 seconds and display screen automatically turns off in about 2 mins after the setting job is terminated. While Air 1 is in the stand-by mode, a Pilot button blinks every 2 seconds showing the commander unit is in stand-by mode. To turn on Air 1 again, press Mode/ S/ Pilot button on the Commander.

In case Air 1 is not in use for over 60 minutes, the unit is completely turned off.


To turn on Air 1 again hold On/Off switch for 1 second.

### Reset setup Option


Press the Mode button for 5 seconds, all the setting will be reset to the factory default.

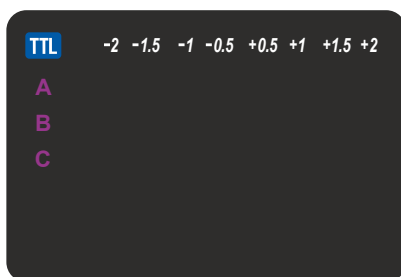

**TTL**

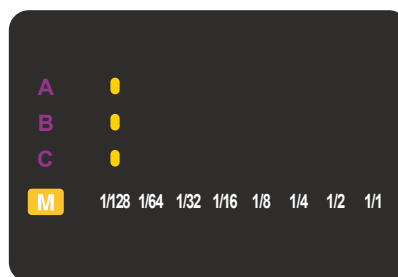


**Maunal**

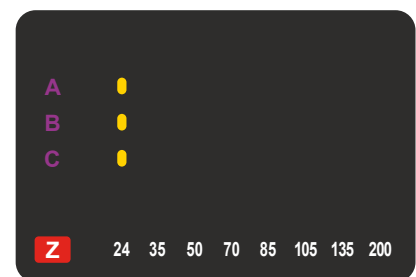

**Manual Zoom**


## Mounting Air 1 on the camera

1. Slide the mounting foot of Air 1 into the hotshoe of the camera.
2. Make sure that the mounting foot will lock (with a “click”) when it has been inserted completely.

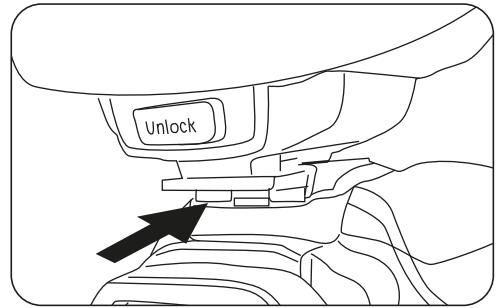

## Removing Air 1 from the camera

- Press the unlock button and slide the mounting foot of Air 1 off the hotshoe of the camera.

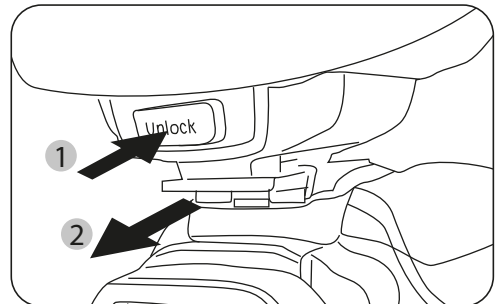

## For Canon camera model EOS 1DX and 7DM2 Only

**For using with Canon camera model EOS 1DX and 7DM2.  
Before Binding setting, please follow the technical setting  
below on Commander Air 1.**


Step 1: Commander Air 1 is OFF

Step 2: Hold “Mode” and on/ off switch for two seconds until Pilot button Blinking  
(orange/ white)

Step 3: Hold on/off switch for 5 seconds to turn off the Commander unit

Step 4: Binding setting

(please follow the Commander Air 1 quick manual or user’s manual)

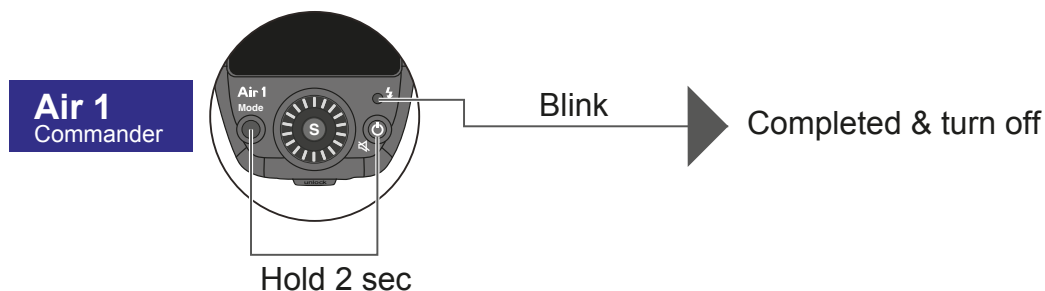

*\* Same steps for Cancel the technical setting*

## For Sony Only

**For using with Sony camera.**

**Before using Commander Air 1, please install Air 1 on camera and change the Flash mode to “WL” in camera menu.**

## For Sony Only - HSS High-Speed Synchronization

- Air 1 supports shutter speeds up to 1/8,000 second.
- High-speed Synchronization: In M/ TTL mode.
- High-speed Synchronization is controlled by Air 1.
- **To enable/ disable on Air 1:**
  - ON:** Press and hold Pilot button in 3 seconds.  
Pilot button starts blinking twice.
  - OFF:** Press and hold Pilot button in 3 seconds to cancel the setting .
- High-speed mode use higher flash energy. To protect the flash from overheat. The recycling time will be extended to a minimum 7 seconds.



# Wireless Flash Shooting

## Wireless Setting

To perform wireless shooting, set the commander Air 1 (master unit) and flash (slave unit) with the following procedure.



### Binding before use.

Step 1: All the units are OFF

Step 2: Binding setting

#### Nissin flash Di700A

1. Hold “Set” and ON/OFF button for 3 seconds
  2. “Beep” sound ON
- \* Repeat this step if you have more than one flash



#### Nissin commander Air 1

1. Hold “S” and ON/OFF button for 3 seconds
2. Pilot button Blinking for about 5 seconds




#### Nissin flash Di700A

“Beep” sound STOP ----- **Binding setting completed**

*\*2~4s signal delay on commander*

*\*Do not operate until the binding process is finished*

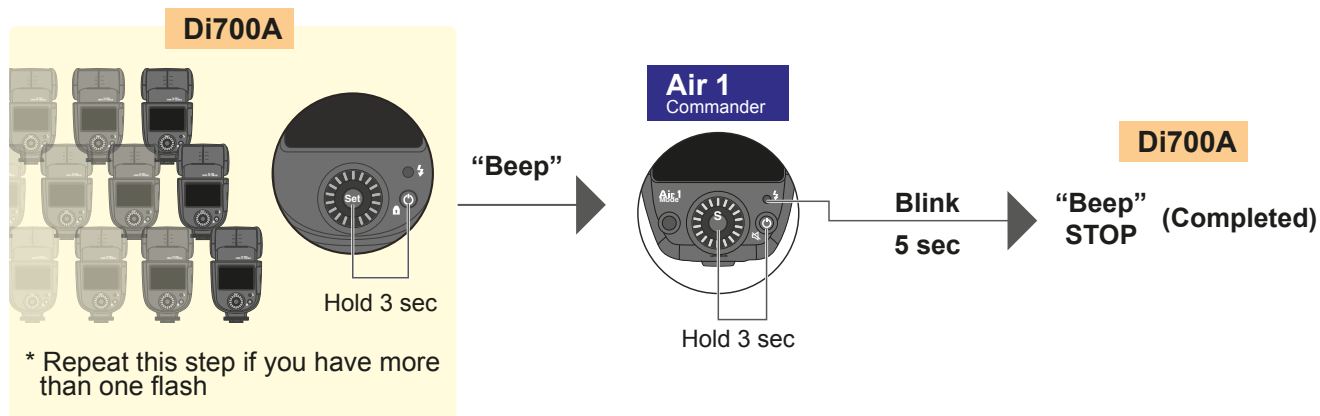

## NOTE

The binding setting is memorized and remains unchanged when power on/off.

For a test-flash, press the pilot button.

The Nissin commander attached to the camera is called the master unit, and a flash that is wirelessly controlled is called slave unit.

Di700A will be switched to Radio Transmission Mode (2.4GHz transmission) once connecting to NAS Commander, all functions will be controlled through NAS Commander. Otherwise, Optical Transmission mode will be enabled by default.


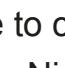




# Wireless Flash Shooting

## Step 3: Channel setting

To avoid interference with wireless multiple flash system using radio transmission that are used by other photographers, or with other devices that use radio waves (wireless), you can change the transmission channel and wireless radio ID.

### Nissin commander Air 1

1. Hold "S" button for 3 seconds
2. Display screen automatically change to
3. Rotate the dial  to select 1 in 8 Channels
4. Press  1 time to confirm
5. "Beep" sound in Nissin Flash Di700A
6. Channel setting completed

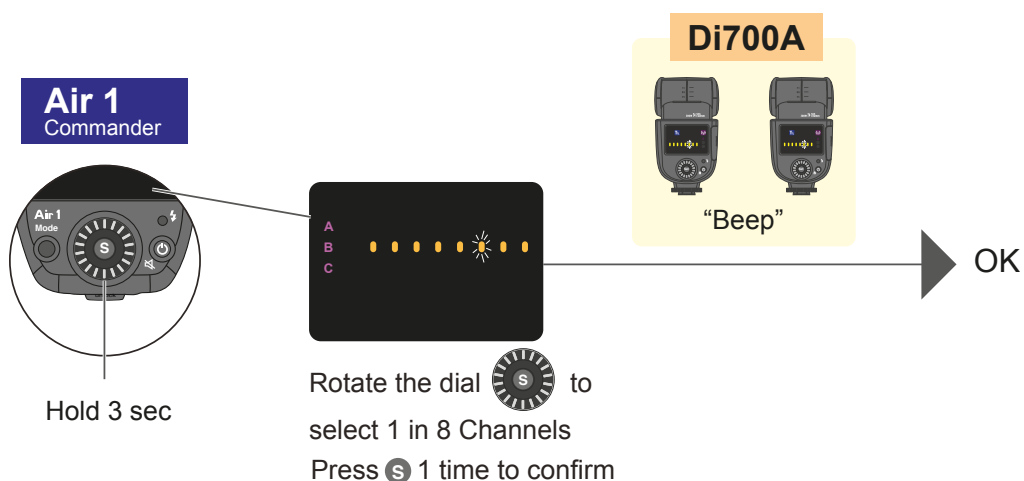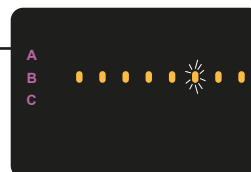





# Wireless Flash Shooting

## Step 4: Desire group setting

### Di700A


Group A/B/C setting  
in Di700A - (TTL)



Group A




Group B

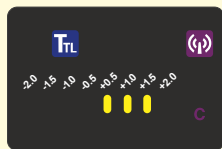

Group C

### Air 1 Commander

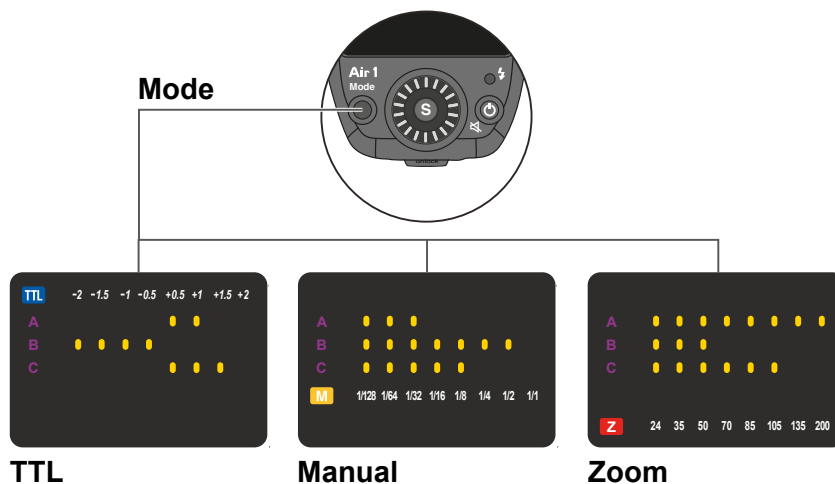


1. Press Mode to select the Flash mode **TTL** / **M** / **Z**
2. Press **S** to select the group **A** / **B** / **C** / **ABC**
3. To turn off the group by pressing **Power** when the group is blinking
4. Rotate the dial **S** to adjust the EV compensation (TTL)/  
Power output (Manual)/ Zoom position (Zoom) in each group.

## Control the Flash “Beep” sound On/Off


### Nissin commander Air 1

1. Press On/Off button
2. Color change on Pilot button  
Orange - sound On  
White - sound Off


### Air 1 Commander

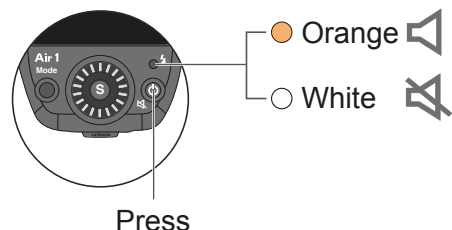

## Control TTL flash power compensation

1. Group A/B/C setting in each Di700A
2. Press Mode button to select the Flash mode **TTL** in Air 1
3. Press **S** to select the group **A** / **B** / **C** / **ABC**
4. Rotate the dial  to adjust the EV compensation (TTL)


TTL flash power compensation is provided in 9 steps by half Ev increments for -2.0, -1.5, -1.0, -0.5, 0, +0.5, +1.0, +1.5 and +2.0 Ev.

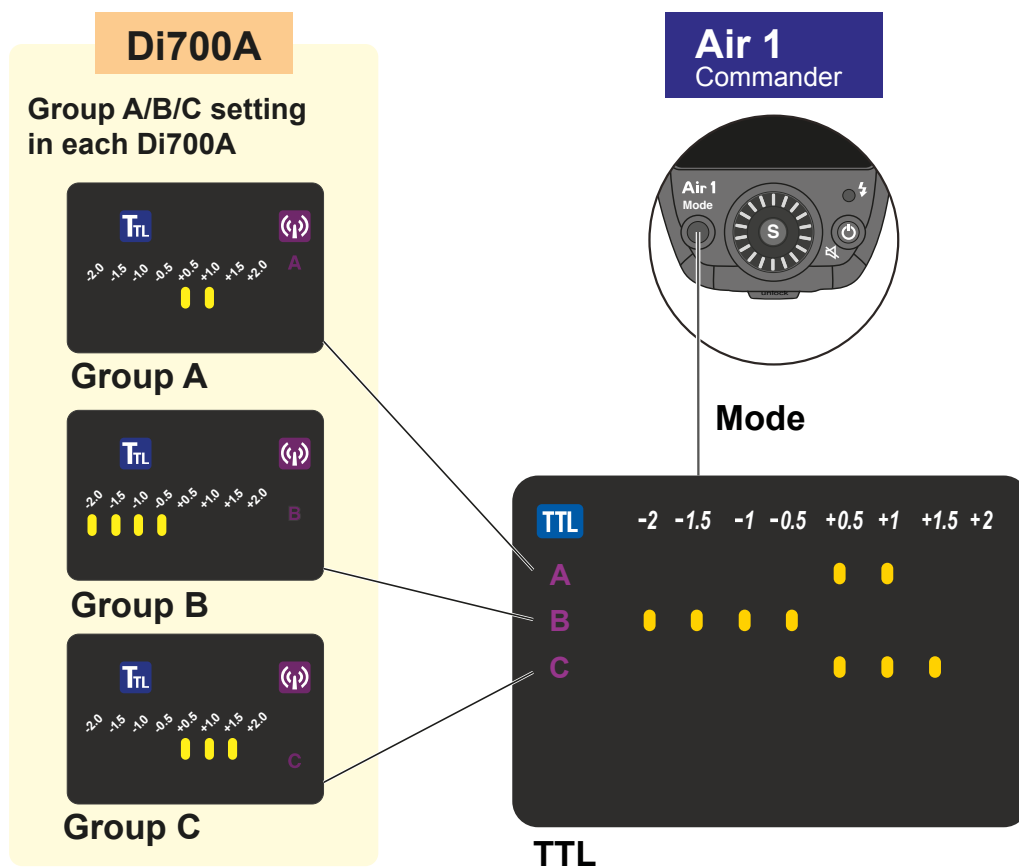


# M

## Manual Exposure Flash

### Wireless control Manual power output


1. Group A/B/C setting in each Di700A
2. Press Mode to select the Flash mode **M** in Air 1
3. Press **S** to select the group **A** / **B** / **C** / **ABC**
4. Rotate the dial  to adjust the Power output (Manual)  
from the left to right : 1/128 – 1/64 – 1/32 – 1/16 – 1/8 – 1/4 – 1/2 – 1/1 (Full) power.

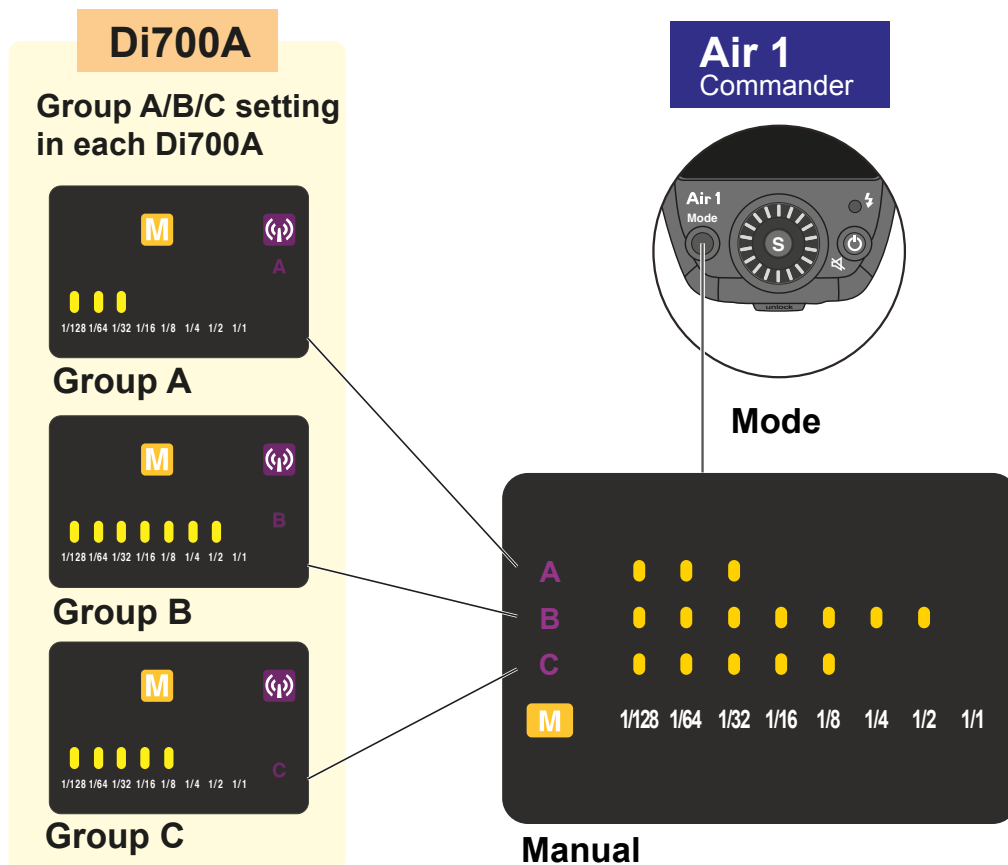




## Manual Zoom Flash

### Wireless control zoom position

1. Group A/B/C setting in each Di700A
2. Press Mode to select the Flash mode **Z** in Air 1
3. Press **S** to select the group **A** / **B** / **C** / **ABC**
4. Rotate the dial  to adjust the zoom position (Manual Zoom)  
24mm/ 35mm/ 50mm/ 70mm/ 85mm/ 105mm/ 135mm/ 200mm

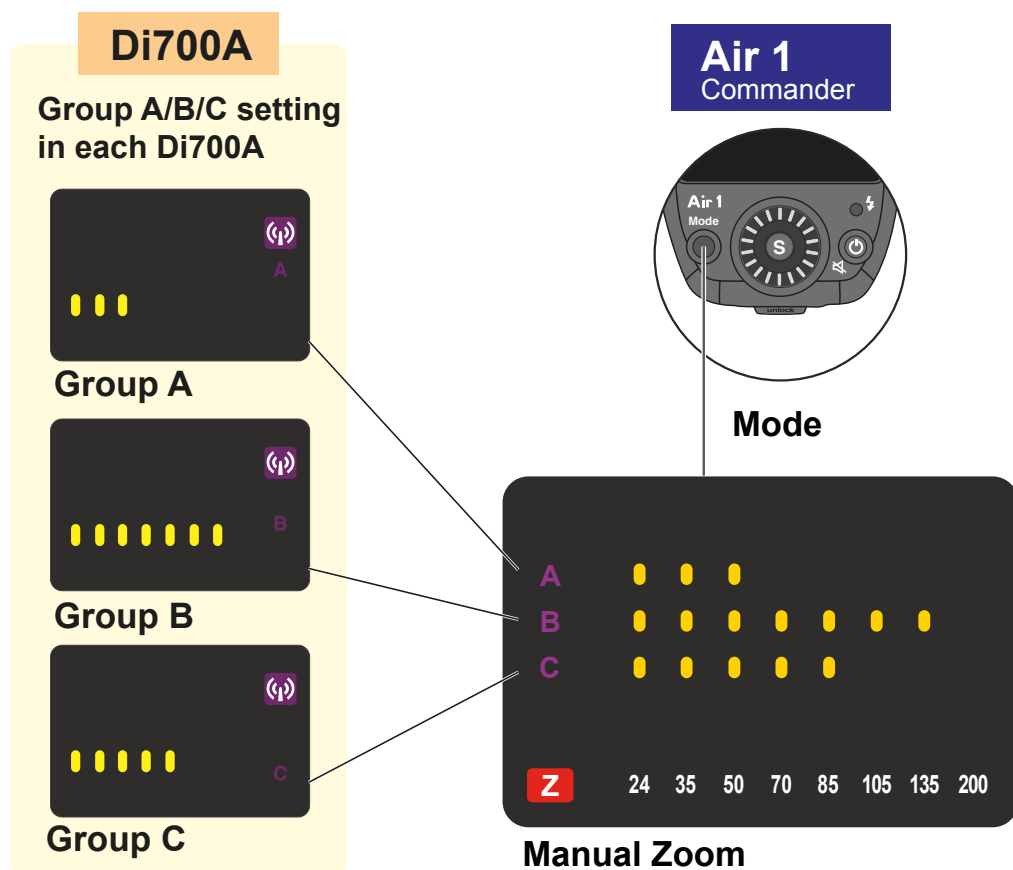



## Wireless Flash Shooting


### Transmission distance, approx. 30m (98.4 ft.)

When the flash is set to the Wireless mode, the power level will be controlled by the master flash. The remote works on all channels and with group A/B/C.


Set slave flash at any place and direct the flash head as you desire. The optical system may not work in bright conditions but the radio should.

Use the flash stand included. Place Di700A on to the flash stand which can be placed either on a flat surface, or on the tripod by the screw.


#### Autoflash shooting using One slave unit

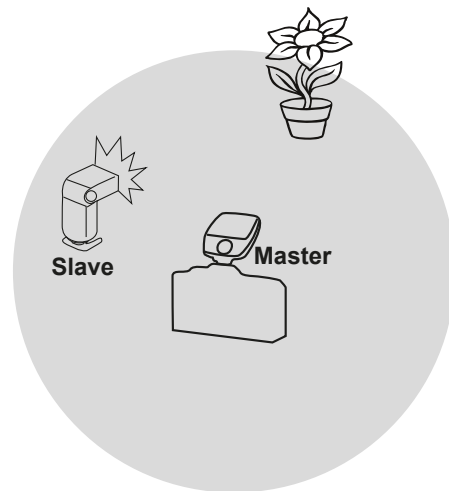

#### Autoflash shooting using Two slave groups

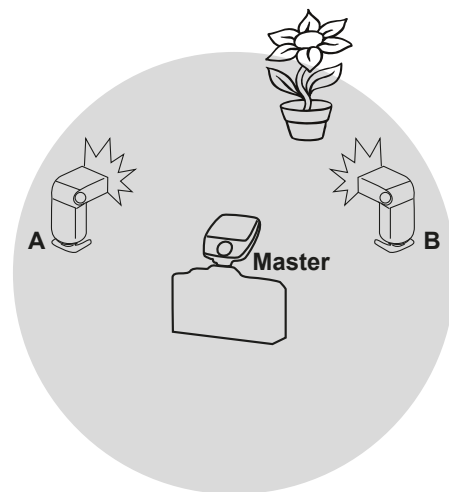

#### Autoflash shooting using Three slave groups

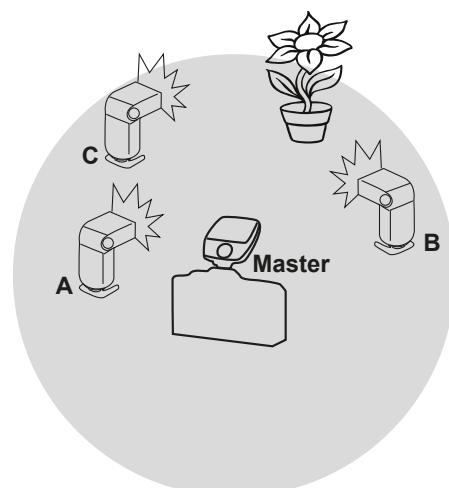

## Specifications

Type	for Canon, Nikon and Sony Digital SLR cameras
Wireless system	Radio category
Radio specifications	2.4GHz ISM band (Obtaining technical standards conformity certification)
Channel	8 channels (channel setting in Air 1)
Flash Groups	A, B, C (3 Groups) (Group control and a specific group can stop transmitting)
Power Source	2 x AAA batteries
Function mode	TTL, Manual and Manual zoom
Continuous shooting speed	10 shots/sec
Number of flashes per charge	Approx. 3,000 flashes
Transmission distant	Max. 30m (Depending on the enviroment)
Mode	[TTL] i-TTL ( Nikon) / E-TTL II / E-TTL (Canon) [manual]/ ADI/ PTTL (Sony)
Manual zoom	Manual adjustment (24/ 35/ 50/ 70/ 85/ 105/ 135/ 200 mm)
EV compensation on flash	[TTL] -2.0 ~ + 2.0 ,1/2EV step [manual] 1 ~ 1/128 (8 steps) Each group can be adjusted independently or synchronized
Synchronization modes	<b>Canon</b> - 1st- Curtain synchronization, 2nd- Curtain synchronization, High-speed synchronization, FE Lock (set on camera) <b>Nikon</b> - 1st- Curtain synchronization, Rear Curtain synchronization, High-speed synchronization, Red-eye reduction, Slow synchronization, FV Lock (set on camera) <b>Sony</b> - 1st- Curtain synchronization, High-speed synchronization, FEL Lock (set on camera)
AF-assist beam effective range	0.7 ~ 5m
Operation panel	LED color panel and select dial
High-speed synchronization	1/8,000 sec
Dimensions	65(L) x 60 (W) x 50 (H)mm/ 2.6(L) x 2.4(W) x 2 (H)inch
Weight	55g / 1.9oz (without batteries)

# Warranty

In case of the following reason of the defect, it may void the warranty. Please refer the respective warranty condition for details which depends on the country of purchase.

1. The product is not used in accordance with the instruction of the owner's manual.
2. The product is repaired or modified by the one who is not an authorized repair service.
3. When the product is used with the cameras not applicable, lens, adaptors or such accessories produced by the third party.
4. Fault or defect caused by fire, earthquake, flood, public pollution and such natural accident.
5. In case that the product is stored in dust, moisture, extremely high temperature or such poor condition.
6. Scratch, blemish, crush or worn out by a violent use or treatment.
7. Guarantee card without name of place purchased or date of purchase stamped, or no guarantee card.

***Nissin***

Nissin Japan Ltd., Tokyo  
<http://www.nissin-japan.com>

Nissin Marketing Ltd., Hong Kong  
<http://www.nissindigital.com>